


SmartLink Quick-Setup Guide

+ medicassist®




Remove AED from carrying case

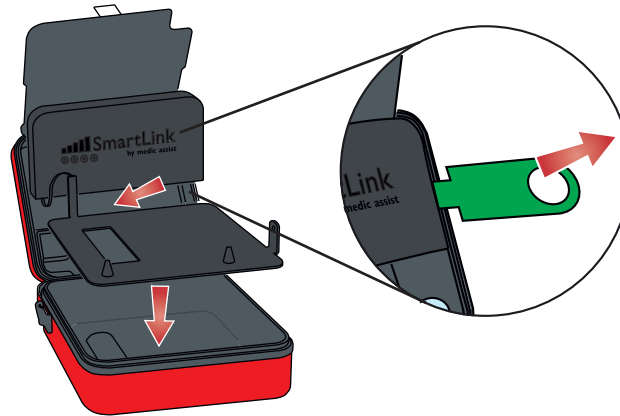


Place SmartLink and Sensor Inlay in case

Pull battery strap from SmartLink

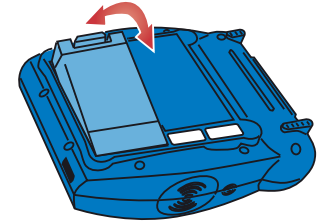

Initiate AED self test by re-inserting battery

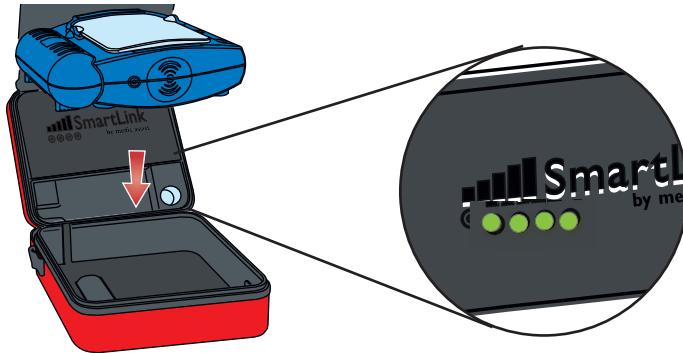

Place AED during self-test on Sensor Inlay

Check status LEDs during SmartLink start up

See back if any status LED from SmartLink is not lit green.

ALTRA
MEDICAL™
Providing complete AED programs

727-541-5900 | www.AltraMedical.com